

### Prepare Electrical Wiring



#### **Electrical Requirements**

Must check if the local voltage range is correspond with the working voltage of the fixture. Use min. 75°C supply.



## Grounding Instructions

The grounding and bonding of the overall system shall be done in accordance with NEC Article 600 and local codes.



Follow all applicable safety procedures and use Personal Protective Equipment such as hardhats, safety glasses, reflective vest, electrical safety gloves, fall protection equipment and safety toe boots during the installation, operation, and maintenance of the luminare.



310-327-7711 utopialightingus.com info@utopialightingus.com


Contractor is responsible for adequately reinforcing ceilings to support luminaire weight. Utopia Lighting accepts no responsibility for inadequately reinforced ceilings. The information contained in this drawing is the sole property of Utopia Lighting. Any reproduction in part or whole is prohibited and warranty is voided.



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

# TTL LED INSTALLATION INSTRUCTIONS

**T-Bar Installation** 

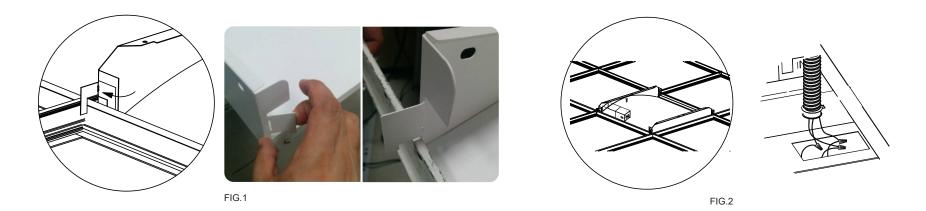





- 1. Insert the fixture onto T-Bar Grid.
- 2. Bend out T-Bar mounting tab to 90° on each corner and position the fixture on the T-grid [Fig.1].
- 3. Unscrew and open the driver box and make wire connections using one of the knockouts [Fig.2].
- 4. Close the driver box [Fig.3].



310-327-7711 utopialightingus.com info@utopialightingus.com

Contractor is responsible for adequately reinforcing ceilings to support luminaire weight. Utopia Lighting accepts no responsibility for inadequately reinforced ceilings. The information contained in this drawing is the sole property of Utopia Lighting. Any reproduction in part or whole is prohibited and warranty is voided.




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.




## Wiring Diagram

# WIRING DIAGRAM

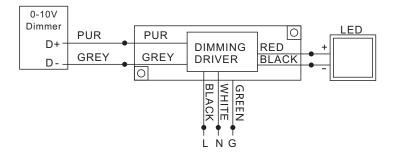

# WATTAGE ADJUSTABLE

2X2 FIXTURE PERFORMANCE		
ON OFF OFF	OFF ON ON	OFF ON OFF
Output Current:	Output Current:	Output Current:
1000mA	890mA	760mA
Power:	Power:	<b>Power:</b>
40W	35W	30 <b>W</b>

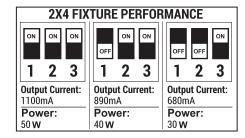



310-327-7711 utopialightingus.com info@utopialightingus.com Contractor is responsible for adequately reinforcing ceilings to support luminaire weight. Utopia Lighting accepts no responsibility for inadequately reinforced ceilings. The information contained in this drawing is the sole property of Utopia Lighting. Any reproduction in part or whole is prohibited and warranty is voided.



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.